

Folding Footrest set for 65-70 650's Part no. 82-6653/4



Front Number Plates

Norton/Matchless
G/N15 models and Atlas
Part no. 01-1835



Mounting Posts
Part no. 93-00966



Front number plate with surround as used on
Triumph TRW & other pre-unit models
Part no. 82-2698

Chapter 13: Fenders

All supplied undrilled except for genuine Norton Commando Type

Make/Model	Front/Rear	Type	Part No.
BSA			
A50/65 etc (up to 1970)	F	Chrome	68-6536
	R	Chrome	68-6856
Matchless			
G80/12CSR/15CSR (1960 on)	F	Alloy	03-1591
	R	Alloy	03-1588
G15CS (1966-69) See Norton N15CS Below.			
Norton			
N15CS (1966-69)	F	Chrome	03-1667
	R	Chrome	03-1633
P11 (1967-68)	F	Alloy	03-1591
P11	F	Chrome	03-1667
P11 & P11A	R	Alloy	03-3138
Commando (Not MK3) Genuine	F	Stainless	06-3175
	R	Stainless	06-3887
Triumph			
500/650 pre 1968	F	Bare Steel	97-1677
	R	Bare Steel	82-6965
1968-70	F	Bare Steel	97-3882
	R	Bare Steel	83-1619B

Generally, off road bikes had a double tab on the lower rear front stay and road bikes had one before 1970 in which year they all had two.

Generic Fenders

Stainless Steel

*Front - 4" wide, "C" Section
Part no. 35032F**Rear - 6" wide, "D" Section
Part no. 35034**Rear - 5" wide, "C" Section
Part no. 35033*

Aluminum (Made in England)

*Front - 4" x 19"
Part no. J80**Rear - 5" X 18/19"
Part no. J80A**Rear - 5 3/4" X 18/19"
Part no. J41A**Front - 3 7/8" X 21"
Part no. MC1***Aluminum unpolished (Taiwanese)**

Front/ Rear	Width	Wheel Size	Part No
F	4"	19"	35001
F	4"	21"	35008
R	5"	18/19"	35009
R	5 3/4"	C Section	35010
R	6"	D Section	35010D "D" Shaped Triumph

Fender Stays**BSA
Top Front***A50/65 1966 USA models (long type)
Part no. 68-6540**A50/65 1968-70 USA models (short type)
Part no. 97-3850**A50/65 4 Piece Front Stay Set Chrome
Part no. 97-3650S***Norton/Matchless****Norton Atlas Scrambler And G/15Cs To 1965***Fender bridge (2 required)
Part no. 03-0394**Rear Fender Stays (2 required)
Part no. 03-0397***G/N15CS/P11 & G15CSR 1966-68***Front Fenders stays (pr)
Part no. 03-1653/5**** Made in 7/16 steel as original***G80CS & P11 Front Fender Bridge
(excellent copy of original part)
Part no. 03-1667B**G/N15CS/CSR Front Bridge
Part no. 03-1667A**G/N15CS (66-68) & G15CSR (65-68) Rear
Fender Loop
Part no. 03-0315***Norton
Dominator/Atlas***Front Stay Chrome (4)
Part no. 06-7741**Commando (painted)
Part no. 06-2323***P11
Rear***Fits Norton/Matchless P11
Part no. 03-3127**Fits Norton/Matchless P11A
Part no. 03-4019**Alloy spacer between P11 frame & rear fender
stay
Part no. 03-2213*

Fender Stays Continued

Triumph

T100/120 etc to 1970

Front

Black

Part no. **97-1681**

Chrome

Part no. **97-3663**

Centre

Black

Part no. **97-1683**

Chrome

Part no. **97-3664**

Lower Rear (2 tabs)

Black

Part no. **97-3885**

Chrome

Part no. **97-3886**

Lower Rear (1 tab)


Black

Part no. **97-1678**

T140 etc Chrome

Front

Part no. **97-4533**

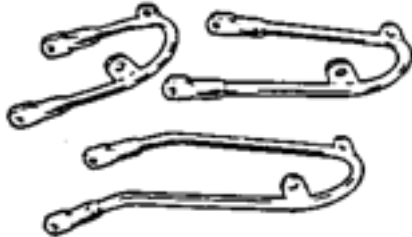

Centre

Part no. **97-4534**

Lower Rear

Part no. **97-4552**

Fender Fitting

71-72 Oil-in-Frame models (also BSA A65)

Front fender clamping brackets (4 required)

Part no. **97-4022**

Rubber Grommets for same (4 required)

Part no. **97-4021**

Fender Stay to Fender Bolts

Many applications on Pre Oil-in- Frame machines, 1/4" UNF thread, Correct dome shape, cadmium plated.

Part no. **14-0101**



Pressed Steel Wiring Protector - fits under rear fender most late 1960's Triumph Models


Part no. **82-7826**

Chapter 14: Seats

We are the North American agents for RK Leighton who make superb quality seats. We also stock very good quality seats made by P & P (Birmingham UK), they are virtually identical to original parts.

Please advise if you need a seat that is not listed here.

Against each seat listed we will indicate "R" for Leighton or "P" for P&P.

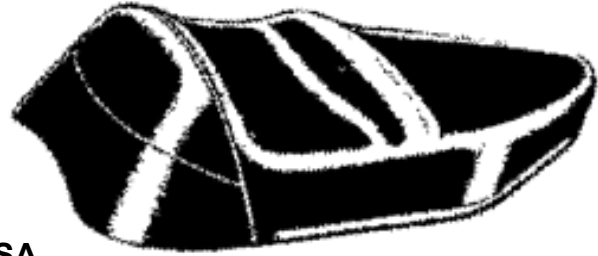

BSA

B25/44 1967-69 "P"

Part no. **82-9732**

A50/65 1963-65 Flat type "P"

Part no. **68-9056**

1967-70 "Hump" Type "P"

Part no. **68-9330**

A65/70 1971-72 "P"

Part no. **83-3633**

A65 Clubman Seat "P"

Part no. **BS28**

Norton/Matchless

G80CS 1964-68 "R"

Part no. **02-6096**

G15CSR 1965-67 & G/N15CS 1966 "R"

Part no. **03-1528**

G/15CS & CSR, also G80CS 1968 Models "R"

Part no. **03-2271**

G15MK2, Atlas Scrambler & G/N15CS 1964-65 "R"

Part no. **02-9449**

P11 1967 "P"

Part no. **03-2134**

P11A 1967-68 "P"

Part no. **03-4024**

Ranger 1968 (Longer dual type) "P"

Part no. **BS46B**