

Fender Stays Continued

Triumph

T100/120 etc to 1970

Front

Black

Part no. **97-1681**

Chrome

Part no. **97-3663**

Centre

Black

Part no. **97-1683**

Chrome

Part no. **97-3664**

Lower Rear (2 tabs)

Black

Part no. **97-3885**

Chrome

Part no. **97-3886**

Lower Rear (1 tab)

Black

Part no. **97-1678**

T140 etc Chrome

Front


Part no. **97-4533**

Centre

Part no. **97-4534**

Lower Rear

Part no. **97-4552**

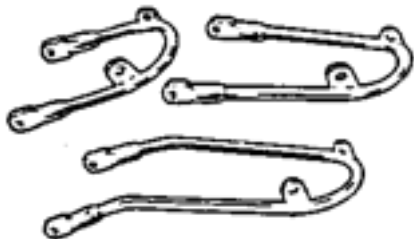

Fender Fitting

71-72 Oil-in-Frame models (also BSA A65)

Front fender clamping brackets (4 required)

Part no. **97-4022**

Rubber Grommets for same (4 required)

Part no. **97-4021**

Fender Stay to Fender Bolts

Many applications on Pre Oil-in- Frame machines, 1/4" UNF thread, Correct dome shape, cadmium plated.

Part no. **14-0101**



Pressed Steel Wiring Protector - fits under rear fender most late 1960's Triumph Models

Part no. **82-7826**

Chapter 14: Seats

We are the North American agents for RK Leighton who make superb quality seats. We also stock very good quality seats made by P & P (Birmingham UK), they are virtually identical to original parts.

Please advise if you need a seat that is not listed here.

Against each seat listed we will indicate "R" for Leighton or "P" for P & P.



BSA

B25/44 1967-69 "P"

Part no. **82-9732**

A50/65 1963-65 Flat type "P"

Part no. **68-9056**

1967-70 "Hump" Type "P"

Part no. **68-9330**

A65/70 1971-72 "P"

Part no. **83-3633**

A65 Clubman Seat "P"

Part no. **BS28**

Norton/Matchless

G80CS 1964-68 "R"

Part no. **02-6096**

G15CSR 1965-67 & G/N15CS 1966 "R"

Part no. **03-1528**

G/15CS & CSR, also G80CS 1968 Models "R"

Part no. **03-2271**

G15MK2, Atlas Scrambler & G/N15CS 1964-65 "R"

Part no. **02-9449**

P11 1967 "P"

Part no. **03-2134**

P11A 1967-68 "P"

Part no. **03-4024**

Ranger 1968 (Longer dual type) "P"

Part no. **BS46B**

Seats Continued

Norton

Atlas/650SS etc

1963-67 Flat Type "R"

Part no. **06-7862R**

1967-68 Hump Type "R"

Part no. **06-7863R**

Commando Seats

There seems to be a great deal of disagreement amongst the experts regarding correct Commando seats. The following has been reviewed by Mr. Emery (Norvil) who has verified it as correct.

Fastback Models - same for all "R"

Part no. **06-0501**

LR (Limited production long range models)

Same as Fastback without the "ears" at the front

Available to special order

Roadster & "S" Type 1969-71

Flat wide seat, ribbed pattern with strap across.

No name on back. "R"

Part no. **06-1168R**

Roadster 1971-72

Narrow base and taller than 06-1168. Ribbed with strap across. Some of the later ones may have logo in gold or silver on the back, but most had no name. Reproduction covers usually have name on them. "R"

Part no. **06-1766R**

Interstate 1972

Ribbed with strap across, similar to Roadster but wider at front, no logo. "P"

Part no. **06-3183**

Early Roadster and "S" seats had fiberglass bases, later ones were steel.

1972-5 Roadster & Interstate seat bases remained unchanged, apart from the addition of a hinge in 1975

1973 - Basket weave pattern with strap across and Gold logo.

Roadster "P"

Part no. **06-3676**

Interstate "P"

Part no. **06-3677**

1974 waffle pattern, no strap, gold logo

Roadster "P"

Part no. **06-5234**

Interstate "P"

Part no. **06-5382**

1975 - same as 1974 except seat now hinged

Roadster "P"

Part no. **06-5612**

Interstate "P"

Part no. **06-5613**

Hi-Rider Seats

Not available at present although we expect to be able to supply them before the end of 2018.

1972 short solo type - ribbed pattern

Part no. **06-2390**

1973 short solo type - basket weave

Part no. **06-3859**

1974-75 longer dual type

Part no. **06-6416**

* Hinge not used on 1975 Hi-Rider seat.

Triumph Seats

For 1966-67 Twins and some earlier models
smooth grey top

"P"

Part no. **82-5239**

"R"

Part no. **82-5239R**



Smooth Black Vinyl top with 6/8 bar ribs across -
1968 Twins and some 1967 models

"P"

Part no. **82-8204**

"R"

Part no. **82-8204R**

Grey top with 6/8 bar ribs across, black sides,
some 500 & 650 twins 1968 "P"

Part no. **82-9517**

Triumph Seats Continued

T100 (69-74)m 650 Twins 1969-70 & T150
1969-74 "Basket Weave"
"P"

Part no. 83-1573

"R"

Part no. 83-1573R



1971 Oil-in-Frame Twins with hinge on right,
parcel catch on left (4 speed models) "P"
Part no. 83-4288

1972 650 Oil-in-Frame Twins with hinge on right
(mostly used on 5 speed models) plunger catch
on left "P"

Part no. 83-4599

**CARE: Some later 650 models 1973-74 had
hinge on left, plunger on right**

750 Twins 1973-77 "P"

Part no. 83-4786

Solo Seats

Quality Lycette type seat supplied with chrome
springs to suit most machines over 250cc

Part no. B20A

Similar seat to B25 but smaller for machines up
to 250cc

Part no. B14A

Saddle Covers

UK Made Large
Part no. B17


Indian Made Large
Part no. B21



UK Made Small
Part no. B21A

Indian Made Small
Part no. B21B

Manx Norton Seat

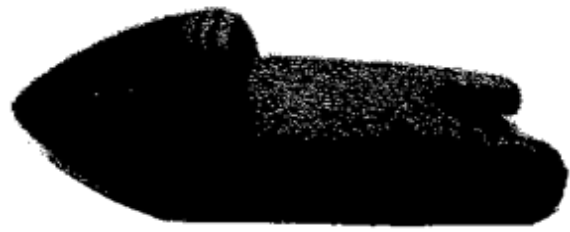

This is a Walridge special item. While we
concentrate mainly on the sale of stock parts,
we were being asked so often by people with
Tritons and Norton specials for Manx Norton
Seats to complete their projects

Very light in construction with carbon fibre
bases, we can get them made for you for
Wideline (up to 1959) or slimline (1960-69)
featherbed frames. We can do them with a
cut-away for access to a central oil tank cap, or
without the cut-away if the stock Norton oil tank
is being used. Covered in black, the trim can be
ordered in black, white, blue or green.

Normal delivery time is approximately 6 weeks
after ordering.

Part no. SEAT001

Seat Covers

Easy to fit quality kits. Other types available to
special order - please ask for details

BMW

R75/5

Part no. BM1

R80/7, R100S, RS, R100T

Part no. BM2

R60/5

Part no. BM3

R45, R65

Part no. BM4

R75/6, R60/6

Part no. BM5

K75 1987-95

Part no. BM8

K100 1983-90

Part no. BM9

Seat Covers Contined

BSA

B25/44 1967-9
Part no. **B9A**

A50/65 "Flat Type" to 1966
Part no. **B4**

A50/65 "Hump Type" 1967-70
Part no. **68-9330C**

A65 1971
Part no. **B6A**

Kawasaki H2

1972-73
Part no. **K230**

1974
Part no. **K165**

1975
Part no. **K176**

Norton/Matchless/AJS

Matchless 1951-55
Part no. **AM1A**

Atlas/Electra 1963-67
Part no. **N102**

Atlas Hump Type
Part no. **N103**

Norton/Matchless/ G15CSR 1965-67/G/N15CS
1966-67 (Leighton)
Part no. **03-1528C**

Atlas Scrambler & N/G15CS to 1965 (Leighton)
Part no. **02-9449C**

P11 (short)
Part no. **N109**

P11 (long)
Part no. **N110**

Ranger
Part no. **N111**

Mercury (hump type)
Part no. **N103**

Commando Fastback (Leighton)
Part no. **06-0501C**

Norton/Matchless/AJS Continued

1969-70 'S' type & Roadsters (Leighton)
Part no. **06-1168C**

1971-72 "S" type & Roadster (Leighton)
Part no. **06-1766RC**

Commando Interstate 1971-72
Part no. **06-3183C**

Commando Roadster 1973
Part no. **06-3676C**

Commando Interstate 1973
Part no. **06-3677C**

Commando Interstate 1974-75
Part no. **N106B**

Commando Roadster 1974-75 5 Type
Part no. **06-5234C**

Waffle pattern fits all 1971-74 Roadsters

Triumph

T110/T120 to 1959
Part no. **T201**

1963-66 Grey Top
Part no. **82-5418**

1968 500/650 & 67TT Black ribbed top
Part no. **T205**

1968 option with grey ribbed top, black sides
Part no. **T205A**

500 Twins 1969-74, 650 Twins 1969-70, T150
1969-74
Part no. **82-9715**

750 Twins 1973-77
Part no. **83-4789**

T160 1975-76
Part no. **83-5378**

Seat Parts

Lycett Badge - For rear of most British solo seats
Part no. **93-04581**



Seat Parts Continued

BSA

A50/65 (67-70) Side Trims
Part no. **98-696**

A65 (1971) Seat Latch Assembly
Part no. **83-3061**



Norton

Seat Knob
Part no. **06-4009E**

Genuine Norton
Part no. **06-4009G**

Washer for above (4 required)
Part no. **82-3814**

Stainless (Best type)
Part no. **82-3814S/S**

Rubber Buffer for Commando Seat Base
Part no. **06-7791**

Triumph Painted Steel Seat Bases

Twins & Triples 1968-74, except Oil-in-Frame
bikes Has threaded holes for 1969 type grab rail
Part no. **83-1573B**

Seat Foam

For Bases 82-9714B & 83-1573B
Part no. **83-1573F**

For BSA A50/65 1967-70 hump type
Part no. **68-9330F**

Norton/Commando Roadster 1971-75
Part no. **06-5234F**

We can also supply foams for many different
makes to special order

Chrome/Plastic Trim (Severl Triumph Models)

Regular Quality (UK)
Part no. **60-0696**

Regular Quality (UK)
Part no. **SUND1027**

Black & Chrome Trim
(Late Triumph &
Commandos)
Part no. **60-696**

Seat Hinges

Seat Hinge Front
Part no. **82-8026**



Seat Hinge Rear
Part no. **82-7862**

Check Wire

To 1970
Part no. **60-0374**

1971 on
Part no. **60-2087**

Seat Plunger Knob
Part no. **82-7560**



Rubber Buffer - Fit under seat on 1971 on BSA
650 twins & Triumph 650 & 750 twins
Part no. **82-9093**



Chapter 15 :Chains



RENOLD chain is of the highest precision
quality, and was original equipment on all British
machines. In most cases, modern 'O' ring chains
are too wide for these machines.

Renold Primary Chains

Make/Model	Year	Part No.
BSA		
B25	1967-72	114038/70
B44/50	1967-73	114038/72
A50/65	1963-72	116038/80
A75	1969-72	116038/82